

ELMO TWAIN DS (VHG) Instruction Manual



ELMO TWAIN DS for HV-800SX/8000SX/8500SX

Ver. 1.00 for Windows 98/2000/Me/XP

Preparation

Installing the USB driver

For using the ELMO TWAIN DS (VHG), the USB driver must be installed in your computer correctly. If the USB driver is not installed, install it according to the Image Mate installation manual.

Connecting the Visual Presenter to a computer

Connect the Visual Presenter (hereafter the main unit) to a computer with the supplied USB cable, then turn on the power for the main unit.

Transferring images to an application program

Selecting a data source

The ELMO TWAIN DS (VHG) is not a stand-alone application program. It is started from within a TWAIN-compliant application. When selecting a data source or device (fig.1), you will need to select the [ELMO TWAIN DS (VHG)] (Fig.2).



Fig.1

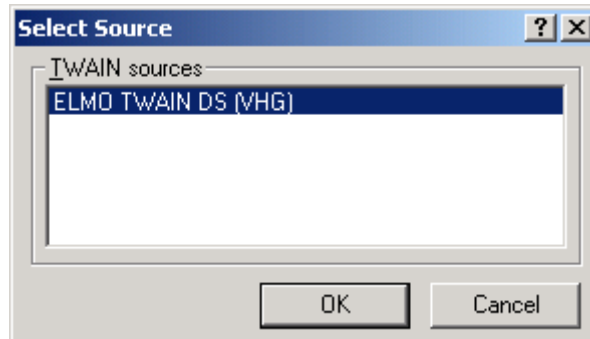 


Fig.2 (a "Select Source" dialog example)

Starting the ELMO TWAIN DS (VHG)

From the menu of your application program, select the menu item equivalent to acquiring an image as Fig.3, then the ELMO TWAIN DS (VHG) user interface as Fig.4 will open.

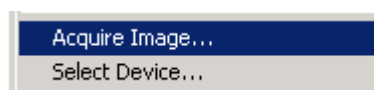


Fig.3

*** These operations will vary among application programs.

*** Because the Image Mate (VHG) and the ELMO TWAIN DS (VHG) cannot be used simultaneously, if the Image Mate (VHG) is already started, please close it.

User Interface

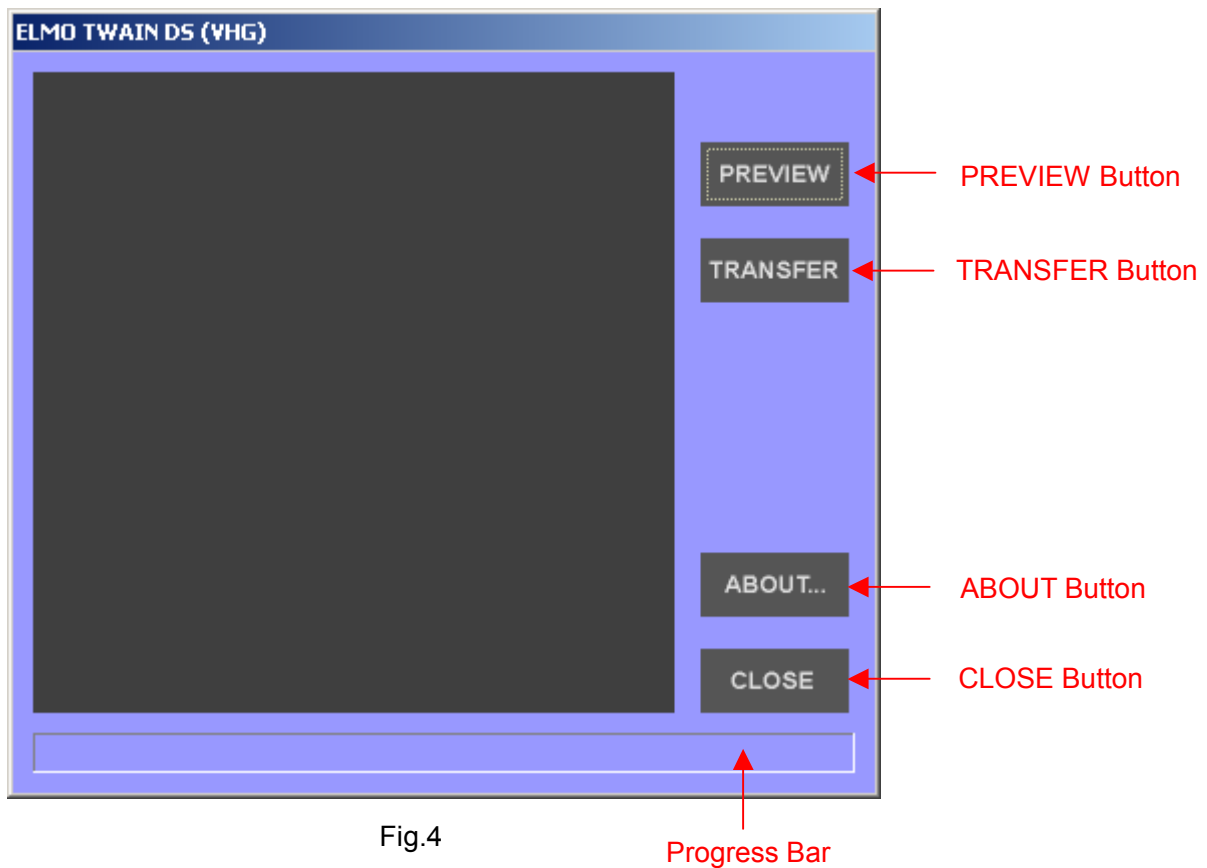


Fig.4

[PREVIEW] Button

Previews an image before transferring it to an application.

[TRANSFER] Button

Transfers an image to the application. If a preview image is displayed, that image will be transferred to the application. If there is no image, an image will be loaded from the main unit, then transferred to the application.

[ABOUT...] Button

Displays the version and the copyright of the ELMO TWAIN DS (VHG).

[CLOSE] Button

Closes the ELMO TWAIN DS user interface dialog.

Progress Bar

Displays the progress when capturing a new image.

Troubleshooting

An application program displays error messages. Or the ELMO TWAIN DS (VHG) dialog is not displayed.

Cause : The main unit is not ready.

Solution : Check the power for the main unit and the connection between the main unit and the computer.

Cause : The Image Mate (VHG) is running.

Solution : Close the Image Mate (VHG).

Tested TWAIN-compliant applications

- Imaging for Windows
- Adobe Photoshop 7
- Jasc Paint Shop Pro 7

Trademark Acknowledgment

- Image Mate is a trademark or registered trademark of Elmo Co., Ltd.
- Adobe and Photoshop are trademarks or registered trademarks of Adobe Systems Incorporated.
- Jasc and Paint Shop Pro are trademarks or registered trademarks of Jasc Software, Inc.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft corporation in the U.S. and/or other countries.
- Other product and corporate names not mentioned above may be trademarks or registered trademarks of their respective companies.

Disclaimer

- The contents of this manual and the ELMO TWAIN DS (VHG) are subject to change without prior notice.
- Elmo Co., Ltd. cannot be held responsible for either direct or indirect damages suffered by users while using the ELMO TWAIN DS (VHG).
- While using the ELMO TWAIN DS (VHG) with untested TWAIN-compliant applications, the results are not guaranteed.

The sample screens shown in this instruction manual may not be the same as those you see while using the ELMO TWAIN DS (VHG).